



New Products

C758-0752

SNAP RING REMOVER & INSTALLER

(For use on shafts up to .850)

Many times the snap ring can be removed by holding the tool and shaft in your hands. There are also holes located in the bottom and sides of this tool for bolting to a table or for use in your vice.

U-Slot



REMOVAL INSTRUCTIONS:

1. Adjust the slide jaws on both sides of the shaft so that they make contact with the shaft.
2. Tighten both of the allen head screws to hold the slide jaws in place.

3. Place the snap ring on top of the slide jaws with the allen head screws facing you.

4. Press out the shaft or tap with a soft face hammer to remove the snap ring. The C758-0752 can also be used with the D158-4035-102 Jiffy Ball Bearing Puller as the holder to aid in removing the snap ring.



INSTALLATION INSTRUCTIONS:

1. Adjust the slide jaws so that they make contact with both sides of the shaft.

2. Tighten both of the allen head screws

3. Then remove the shaft

4. Install the proper snap ring on the inside of the slide jaws facing the direction shown above.

5. Place the shaft through the snap ring and back between the sliding jaws.

6. Press the shaft through the sliding jaws until the snap ring is in the correct position.



Safety First!!

Always wear safety glasses! We recommend covering the snap ring and top of the shaft with a shop towel. This keeps the snap ring from taking flight.



Email: vensel7@comcast.net

Web Site: venselenterprises.com